


Installation Guide



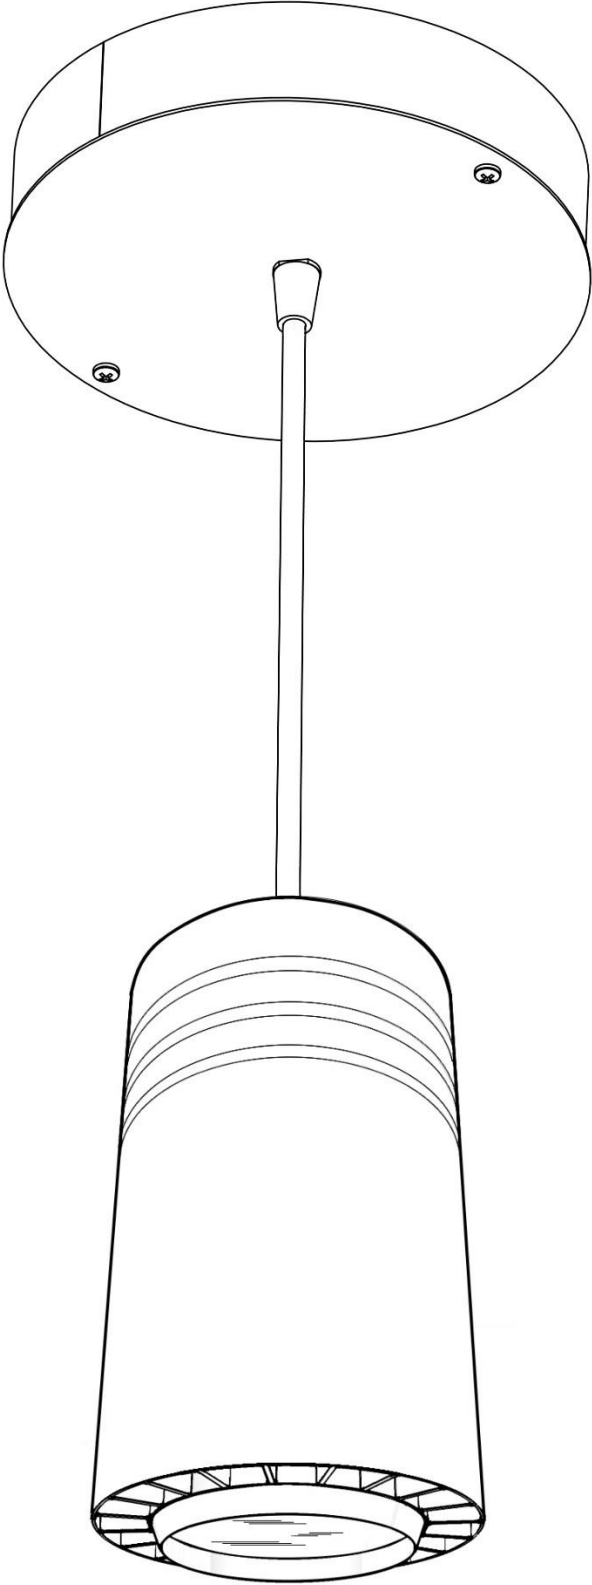

ENGLISH
INSTALLATION INSTRUCTIONS

CAUTION:

Before starting, turn off power at main circuit panel.

FRANÇAIS
INSTRUCTIONS D'INSTALLATION

ATTENTION:


coupez l'alimentation avant de procéder à l'installation.

ESPAÑOL
INSTRUCCIONES DE MONTAJE

ADVERTENCIA:

Antes de comenzar el montaje, cortar la luz en el cuadro general.

Tools Needed

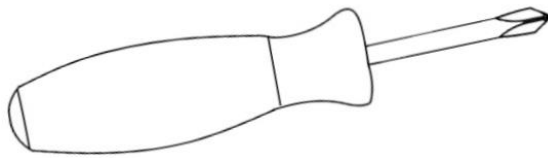


#2 Phillips
Screwdriver

What's Included





Ceiling
Plate Screws

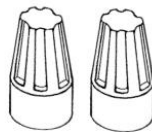

Wire Nuts

1

Mounting the ceiling plate using a #2 Phillip screw driver and both ceiling plate screws.

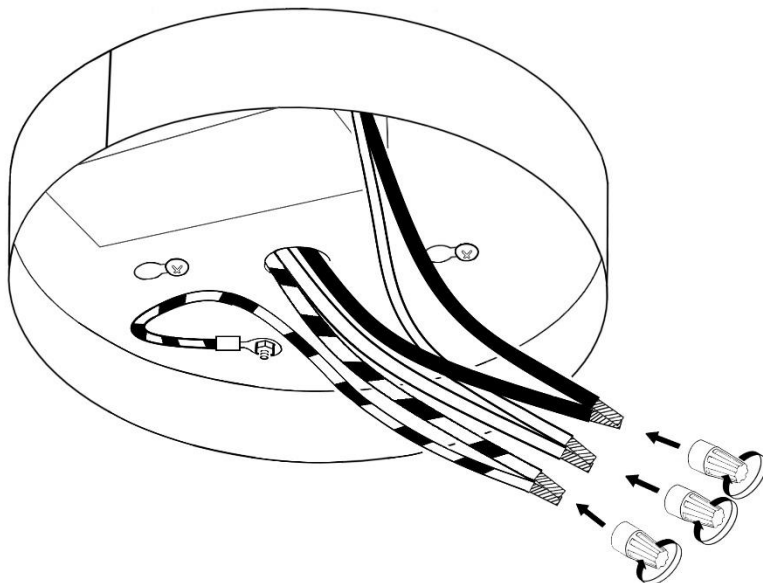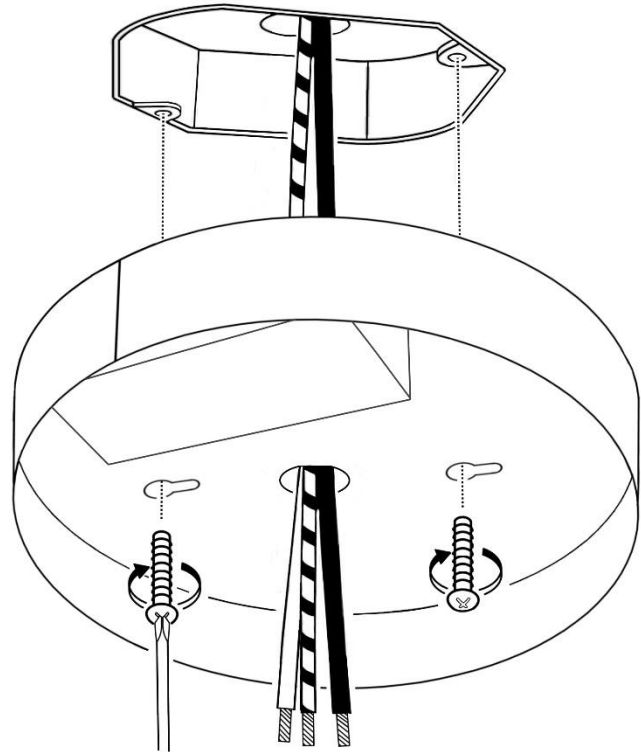

2

Twist the wires together and install the wire nuts.


Transformer Colors:

Blue wire is neutral
Brown wire is hot

Connect the Blue wire with a white neutral wire. Connect the Brown wire with the Black or Red hot wire.

3

Install the ceiling plate with a #2 screw driver.

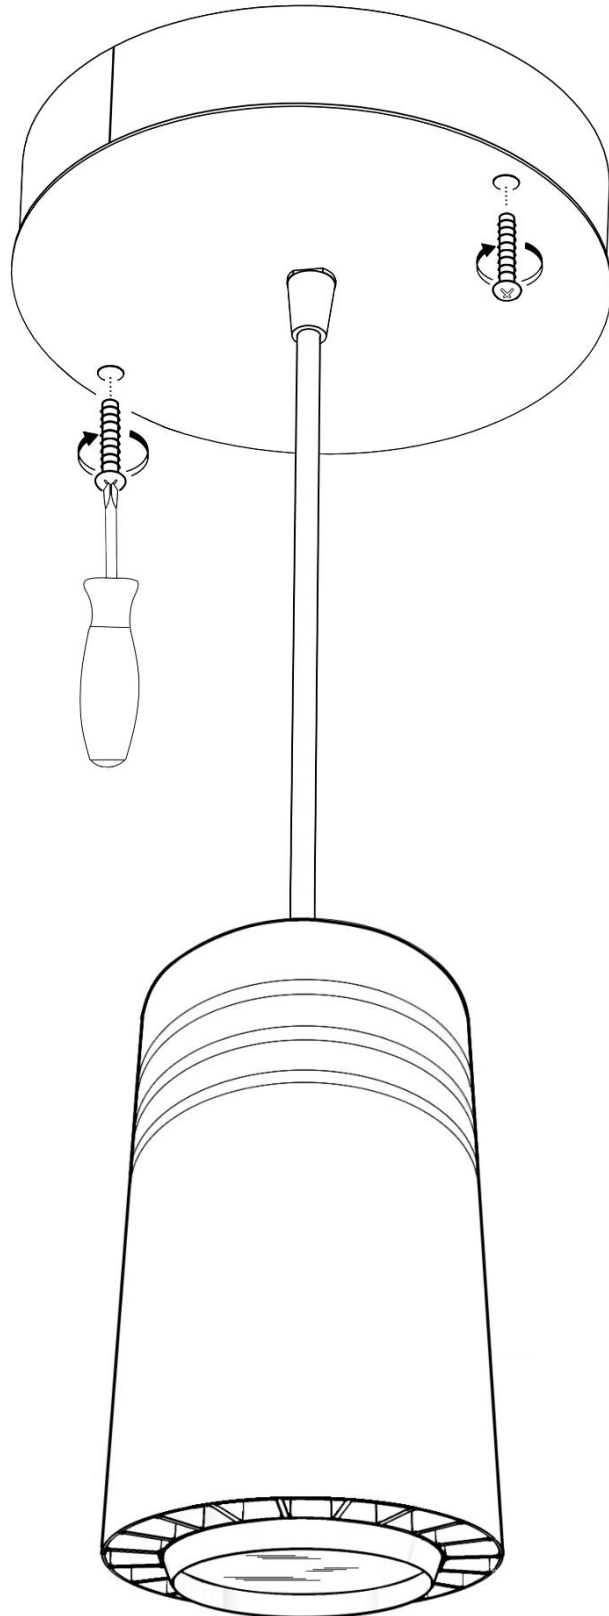

Program the Wall Timer

Before installing the timer, read the Use and Care Guide included with the wall timer. The guide will give you detailed instructions on how to install and program your timer. You can skip this section if you rather follow instructions or if you are using a different wall timer. We provided the instructions below to help simplify the setup and as a reference for the future. Below is the method we used to set up the timer for the first time (adapted from the Use and Care Guide) and two methods of programming the timer. Method 1 matches the sunrise and sunset of your location and automatically changes throughout the year. Method two is used to set an exact on/off time that does not change.

Setting up the timer for the first time.

1. Follow the instructions for installing the timer.
2. Press the reset button to clear any information.
3. Press the set button.
4. Use the up/down buttons to set the time. Press the set button.
5. Use the up/down buttons to set the year. Press the set button.
6. Use the up/down buttons to set the month. Press the set button.
7. Use the up/down buttons to set the day. Press the set button.
8. Use the up/down buttons to turn on/off DST (Daylight Savings Time). If you leave DST on, the timer will automatically adjust the clock for you. Press the set button.
9. Use the up/down buttons to set the zone. Press the set button.
10. Use the up/down buttons to set the dusk time. Press the set button.
11. Use the up/down buttons to set the dawn time. Press the set button.
12. Press the set button to complete the setup and return to clock mode.

Method 1: Matching the sunrise and sunset of your location.

1. Press program (prg) to set the ON time. (PRG 1 ON)
2. Press the set button. This makes the days of the week flash along the top. No changes are needed, we recommend the default of everyday.

3. Press the set button. This allows you to pick the ON time. Use the down button and set the timer to DAWN.
4. Press the set button.
5. Press program (prg) to set the OFF time. (PRG 1 OFF)
6. Press the set button. This makes the days of the week flash along the top. No changes are needed, we recommend the default of everyday.
7. Press the set button. This allows you to pick the OFF time. Use the up/down buttons to select DUSK.
8. Press the set button.
9. Press and hold the program (prg) button for 3 seconds or press nothing for 20 seconds to return to the main screen.

Method 2: Programming an ON/OFF time.

1. Press program (prg) to set the ON time. (PRG 1 ON)
2. Press the set button. This makes the days of the week flash along the top. No changes are needed, we recommend the default of everyday.
3. Press the set button. This allows you to pick the ON time. TIME should be displayed, if not, use the up/down buttons to find the clock setting.
4. Press the set button. This allows you to change the time. Use the up/down buttons to set the ON time. Press the set button.
5. Press program (prg) to set the OFF time. (PRG 1 OFF)
6. Press the set button. This makes the days of the week flash along the top. No changes are needed, we recommend the default of everyday.
7. Press the set button. This allows you to pick the OFF time. TIME should be displayed, if not, use the up/down buttons to find the clock setting.
8. Press the set button. This allows you to change the time. Use the up/down buttons to set the OFF time. Press the set button.
9. Press and hold the program (prg) button for 3 seconds or press nothing for 20 seconds to return to the main screen.